



These concrete dimensions are the same for all Hall Cross Sections, except Transition and DK-in-Hall

Hall cross section 0
from PileRoofStart to PileStart

all variables in hallx_01a.inc
except HallUpperLimit, in layout.inc

